


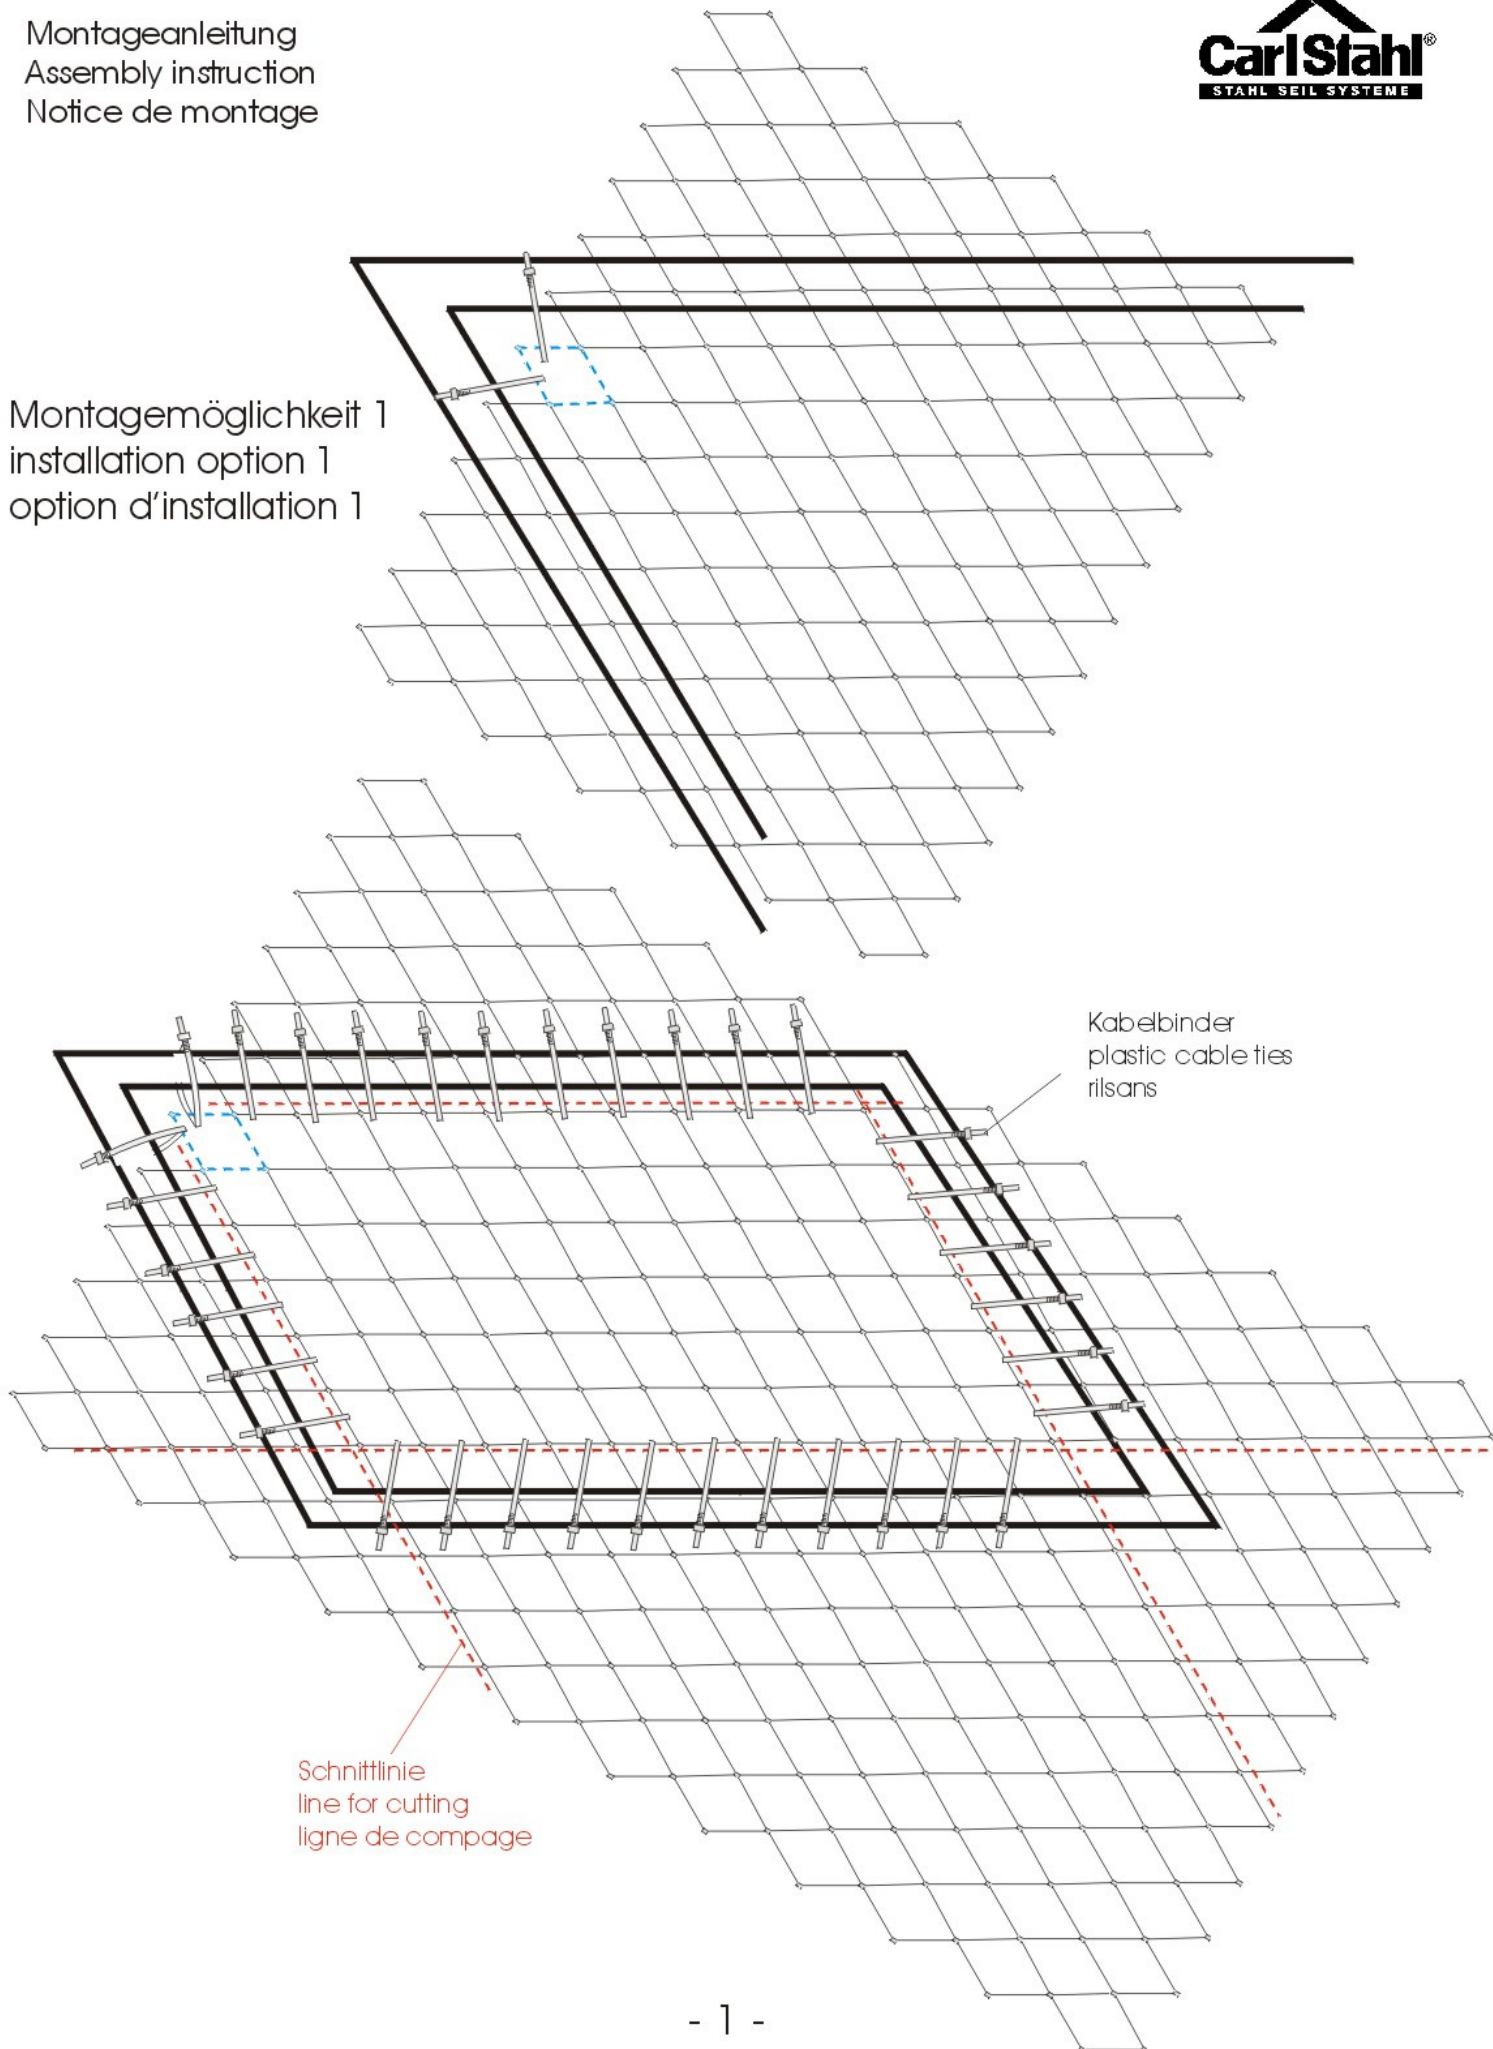
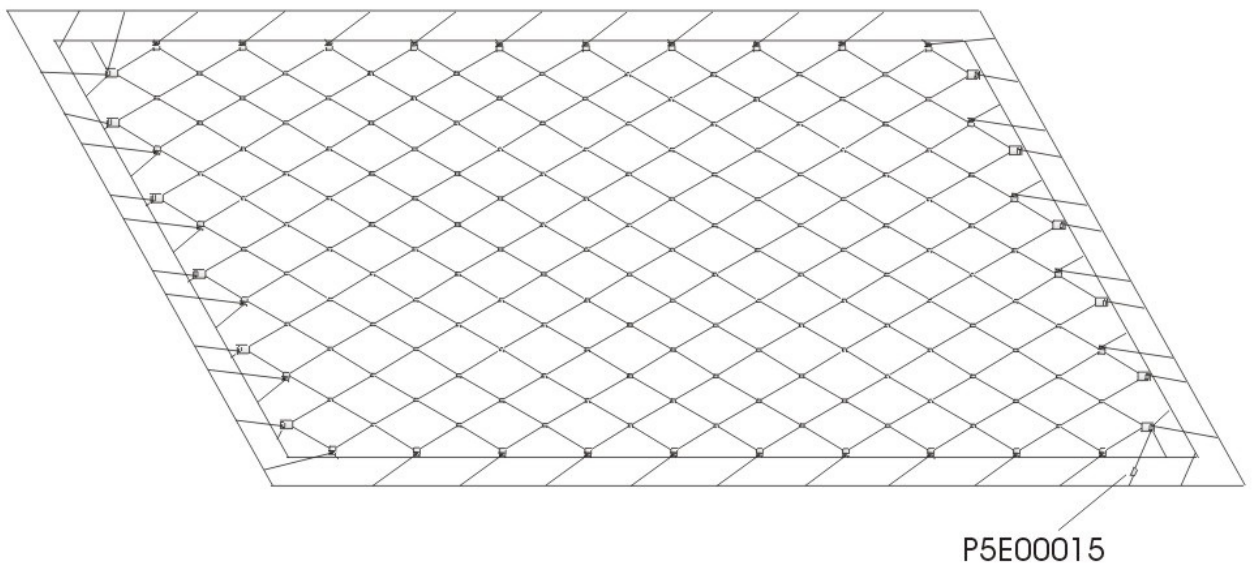


Montagemöglichkeit 1
installation option 1
option d'installation 1

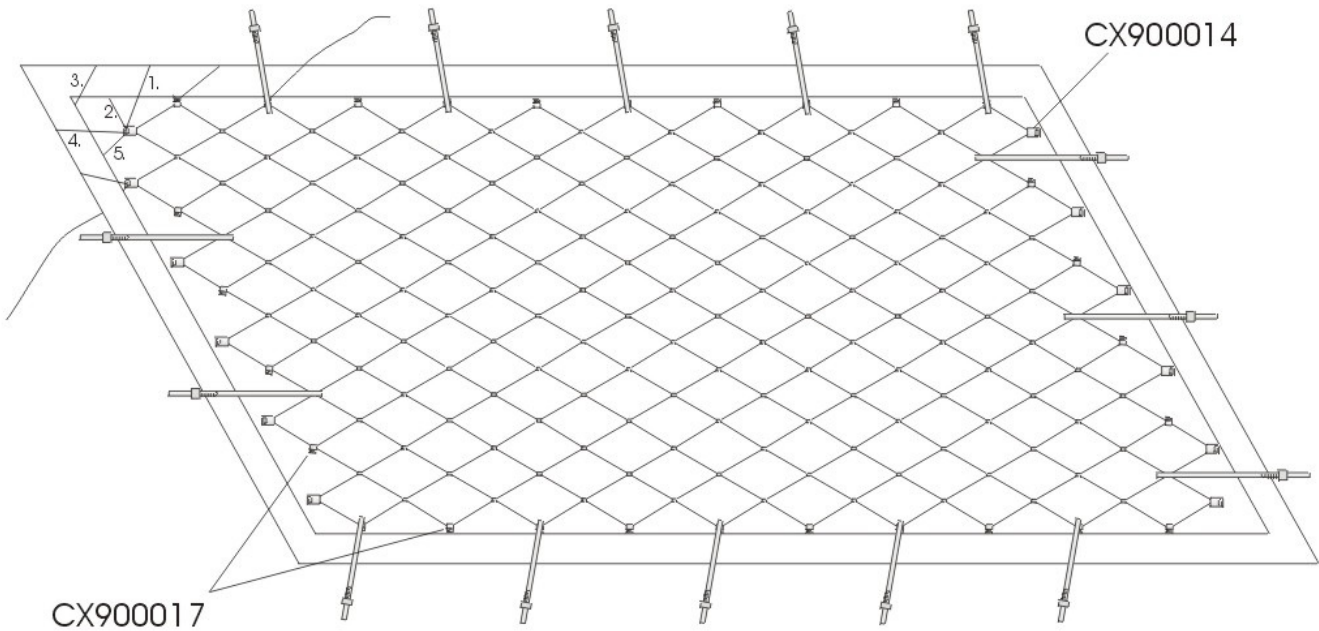

Montagemöglichkeit 2
installation option 2
option d'installation 2

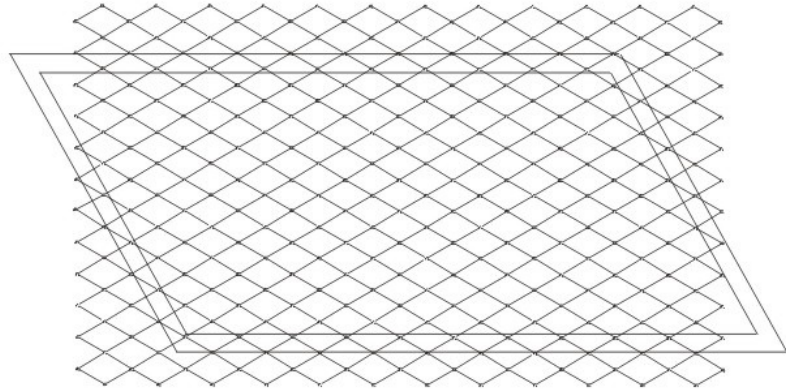


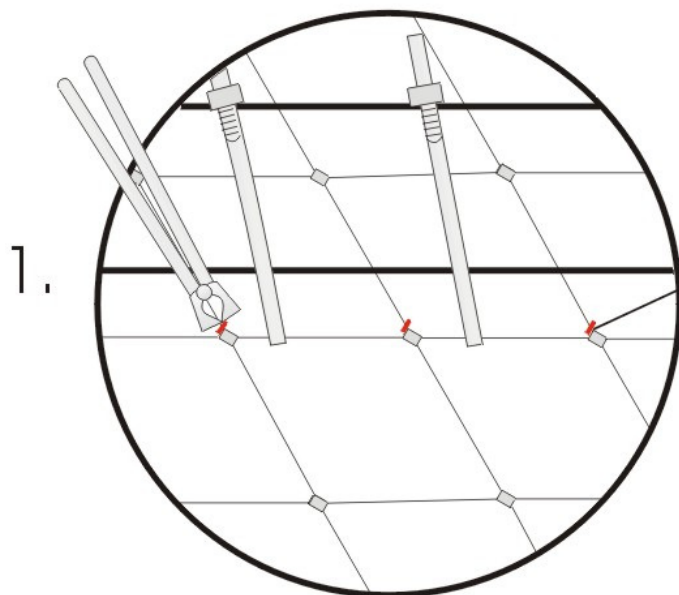

Zuschnitt an Schnittkante bündig zur Netzklammer.

cut right on the outside edge of pressed ferrule.


faire le coupage directement au bord extérieur du manchon pressé.

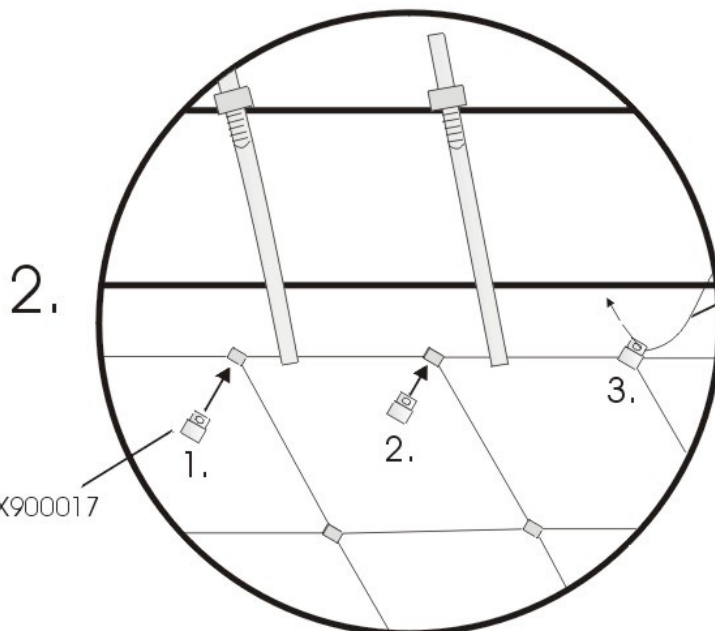


Montageseil


installation cable



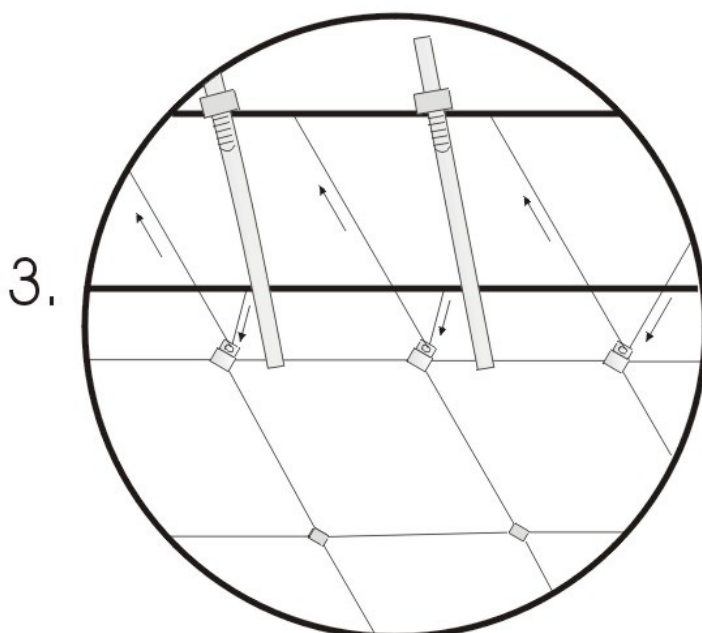


câble de laçage

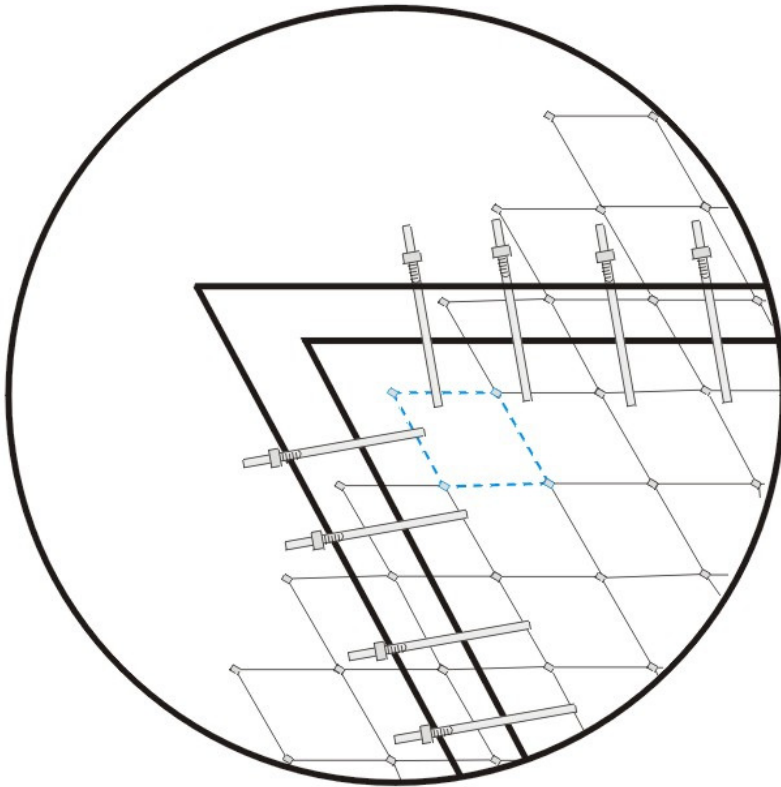

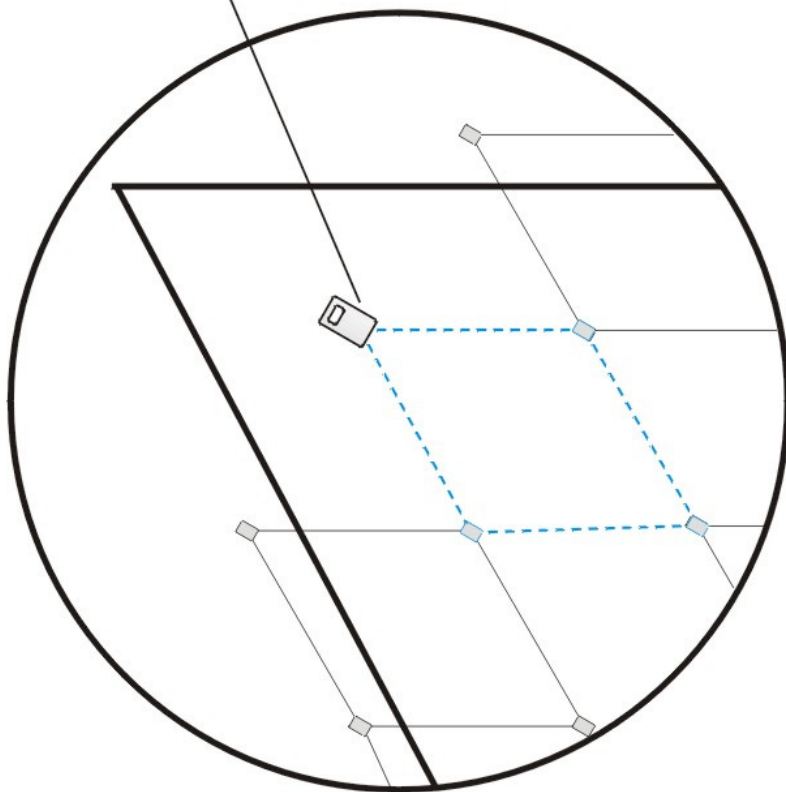


CX900014

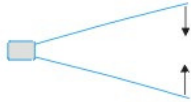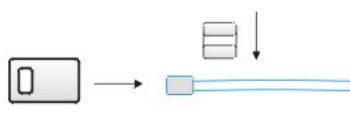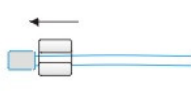


1. 
2. 
3. 
4. 
5. 

1.

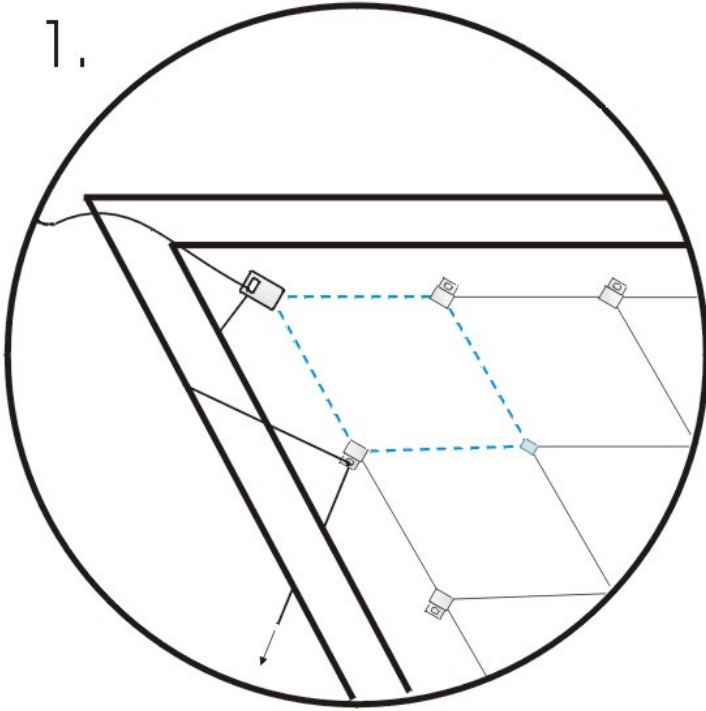

2.

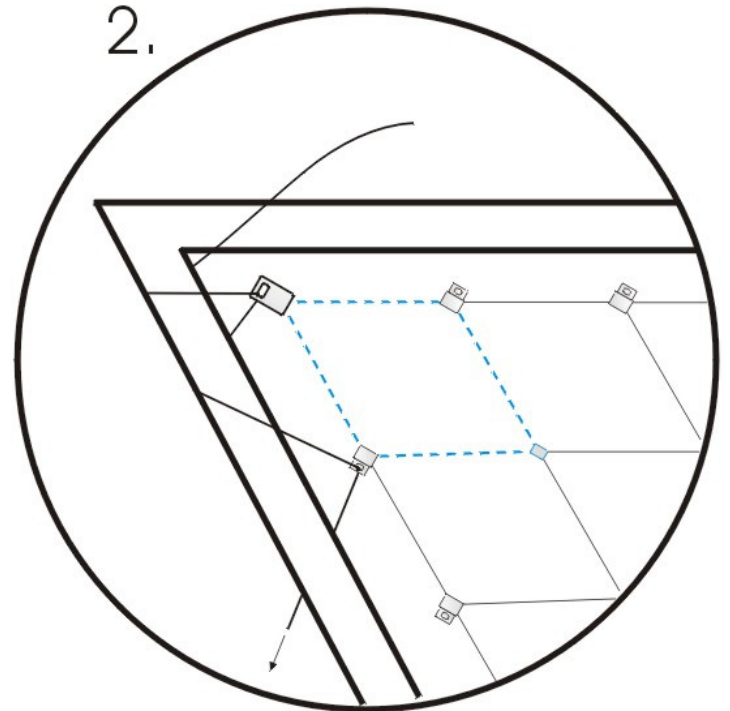

3.

